


Maximum load-bearing:30KG

Mark unit: mm

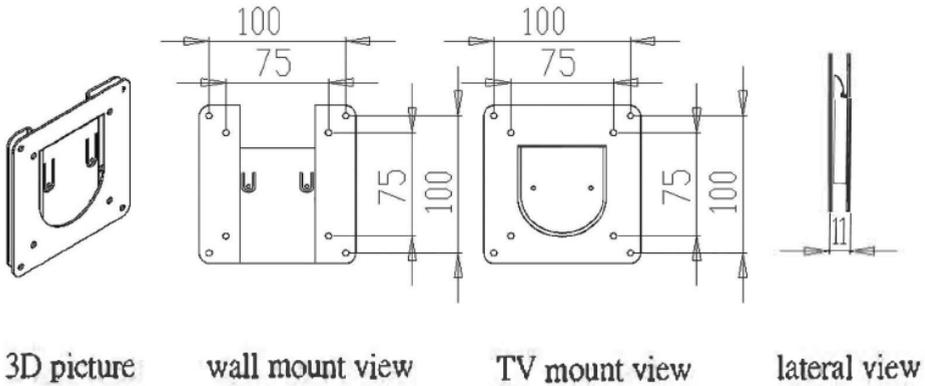


10AX Install process:

Step 1:

Please make sure the thickness of the wall is over 5cm and the material is suitable for installation.

For a wooden wall, please choose wood screws 4pcs .


For a concrete wall, please choose wall anchors 4pcs wall Anchor.

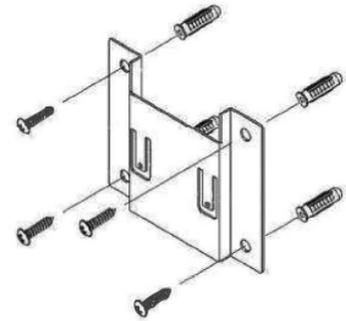

Step 2 :


Remove the TV plug before installation.

Use the M4X12 screw to fasten the screen mount.

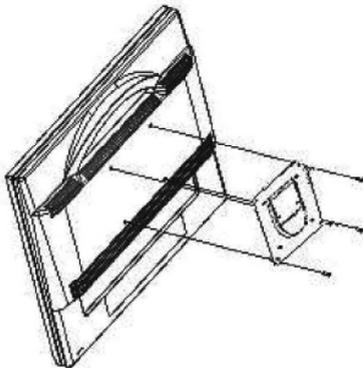

Step 3 :


Combine the screen mount and the mount of wall and make sure the screen mount fix on the mount of wall.

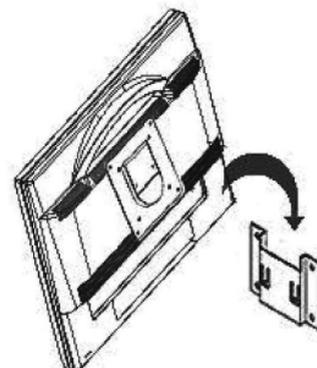

Patent No:097220034

Invention patent rights reserved

 M4x8 screw-4	 wood screws-4	 Wall Anchor-4
---	--	--

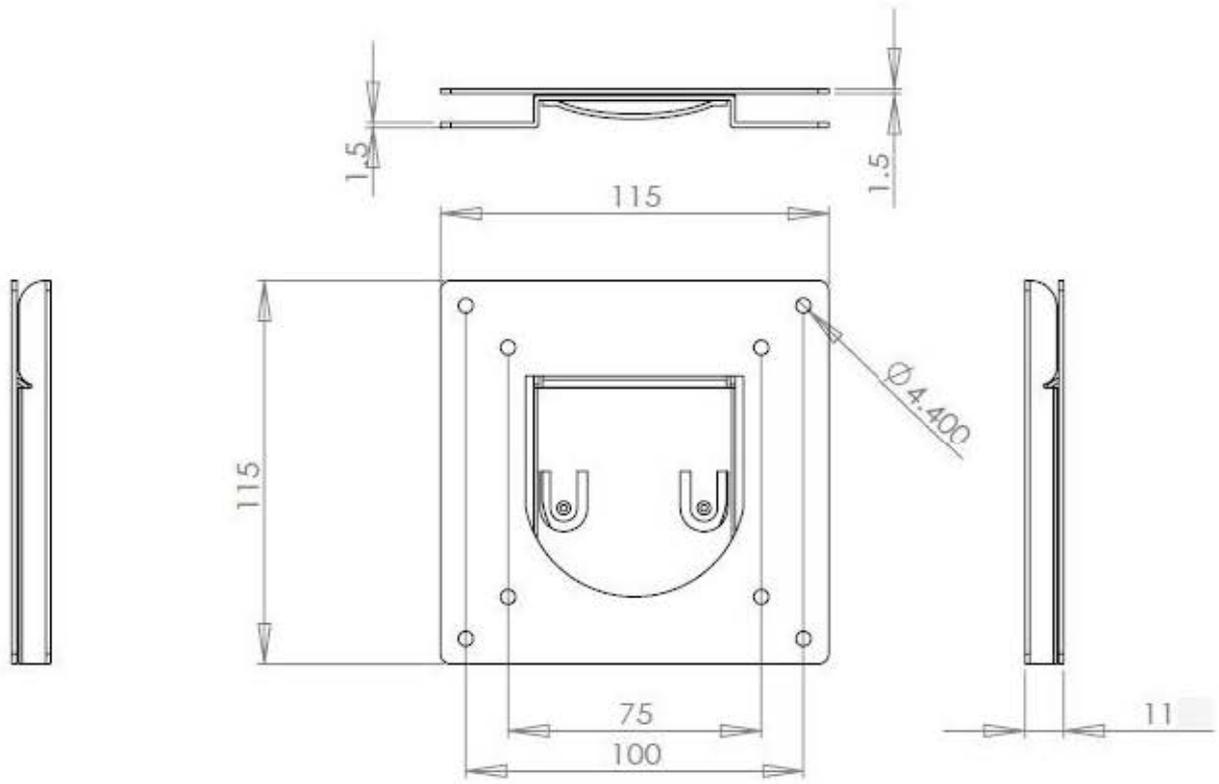

ProDVX has made every attempt to ensure the accuracy and reliability of the information provided on this drawing. However, the information is provided "as is" without warranty of any kind. ProDVX does not accept any responsibility or liability for the accuracy, content, completeness, legality, or reliability of the information contained on this drawing.